 





HOW TO CORRECTLY INFLATE YOUR TYRES

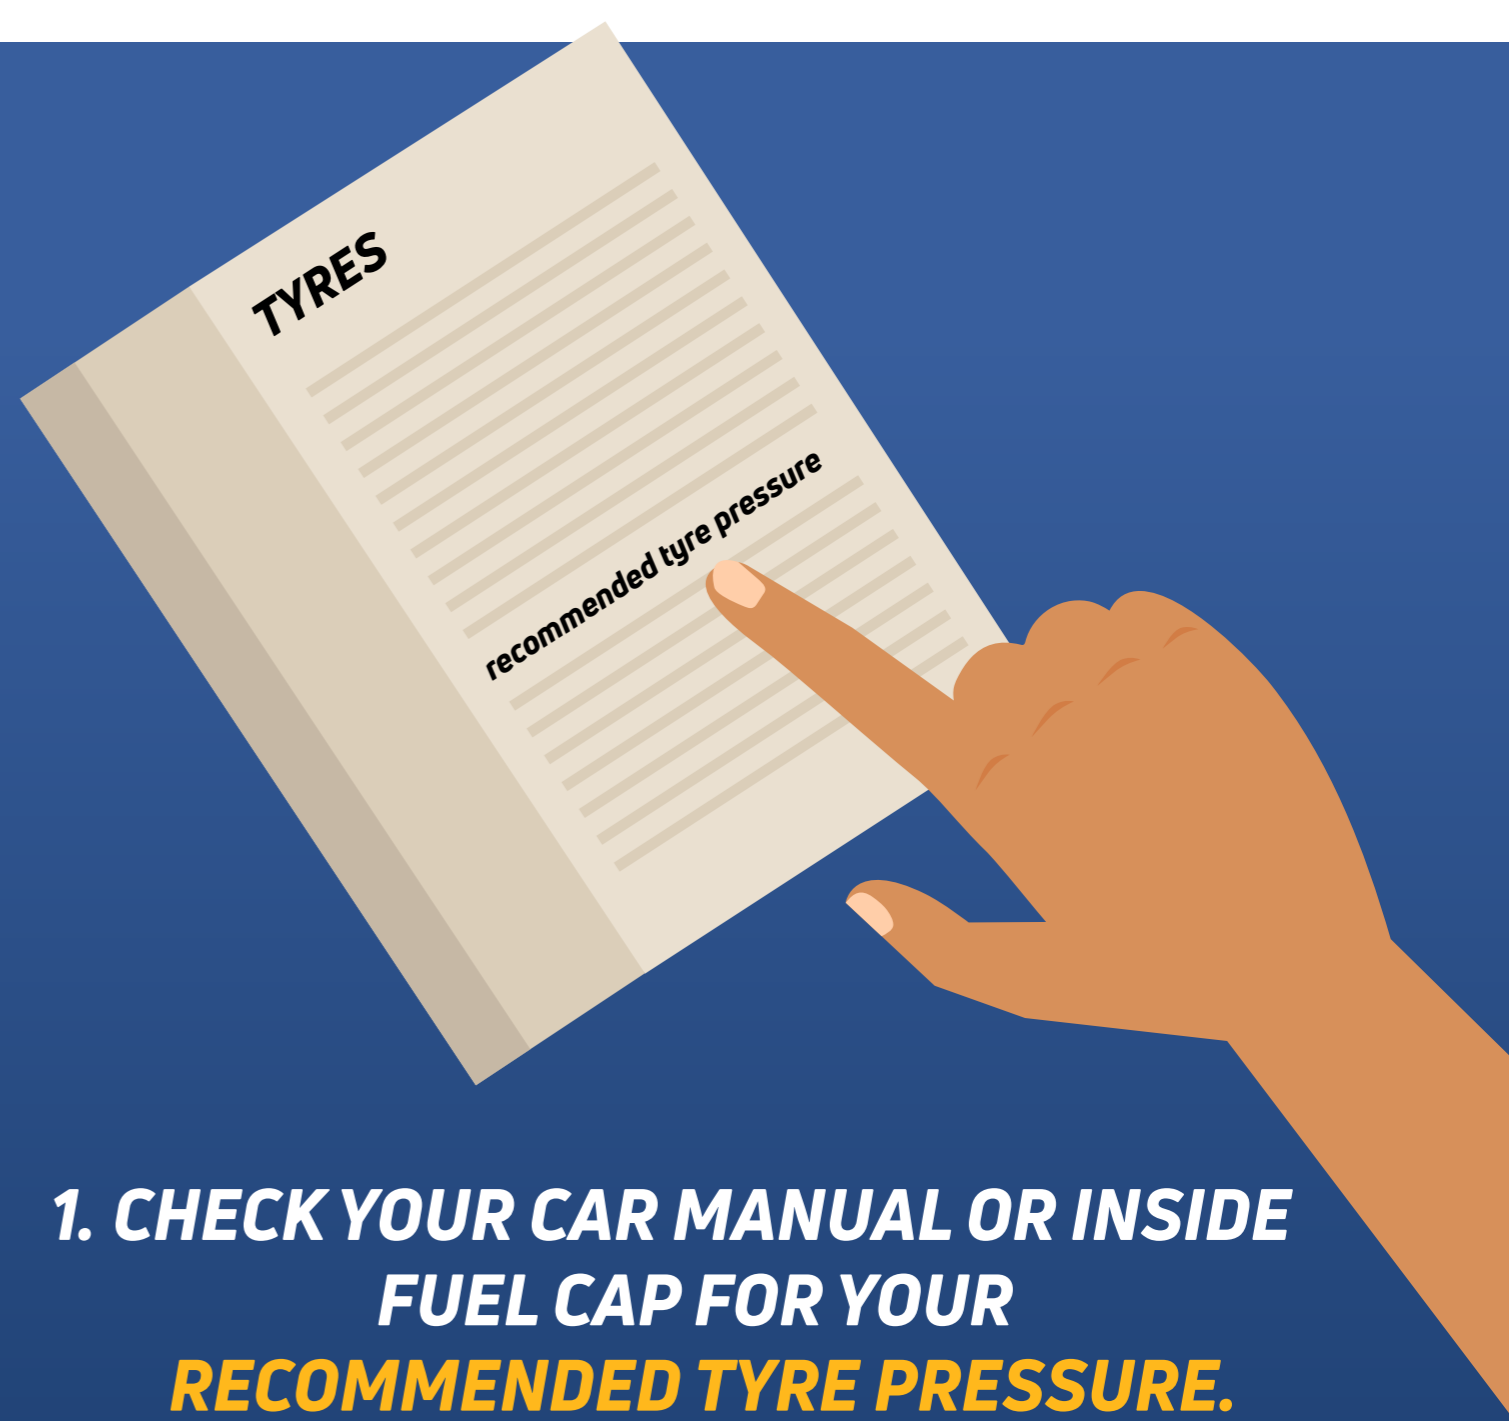


1. CHECK YOUR CAR MANUAL OR INSIDE FUEL CAP FOR YOUR **RECOMMENDED TYRE PRESSURE.**



 
2. **UNSCREW YOUR VALVE CAPS AND KEEP HOLD OF THEM.**

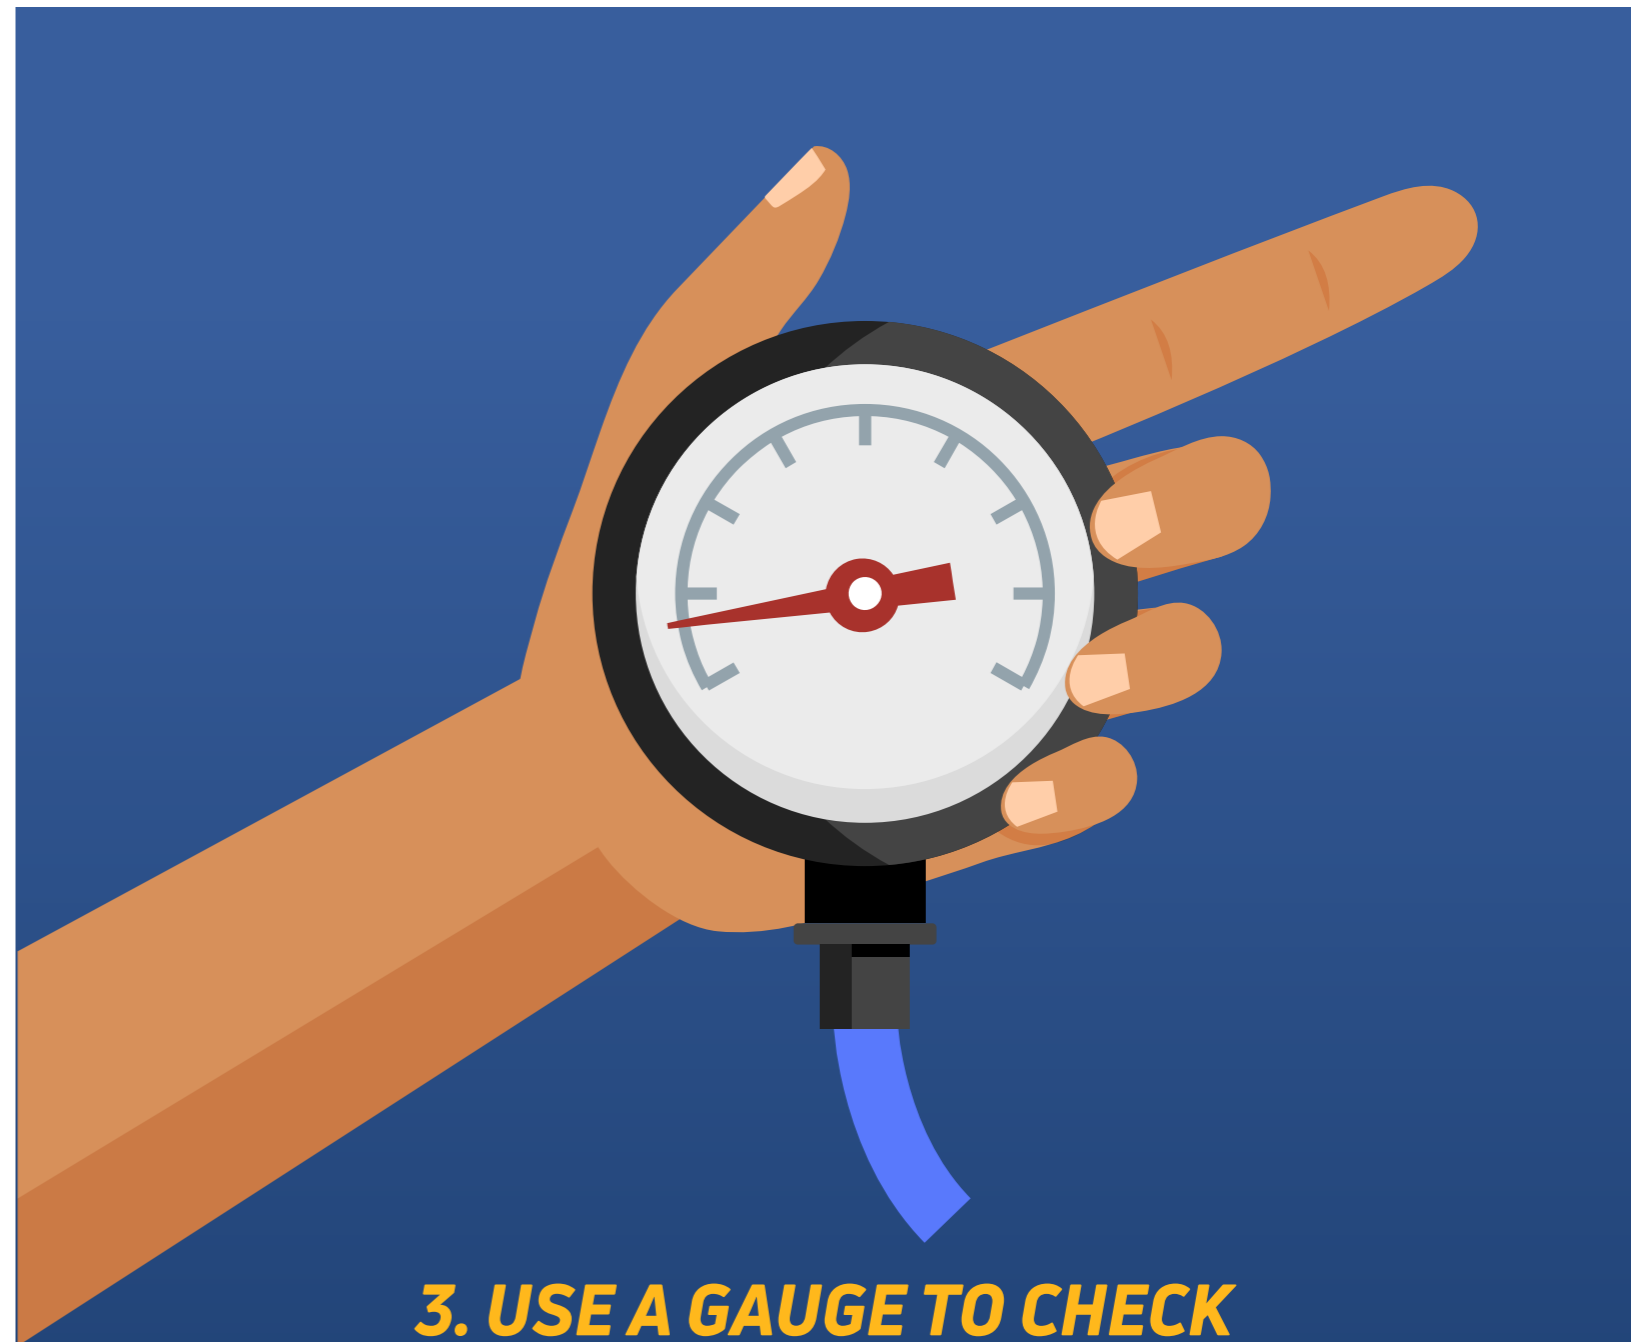

 3. **USE A GAUGE TO CHECK TYRE PRESSURE.**

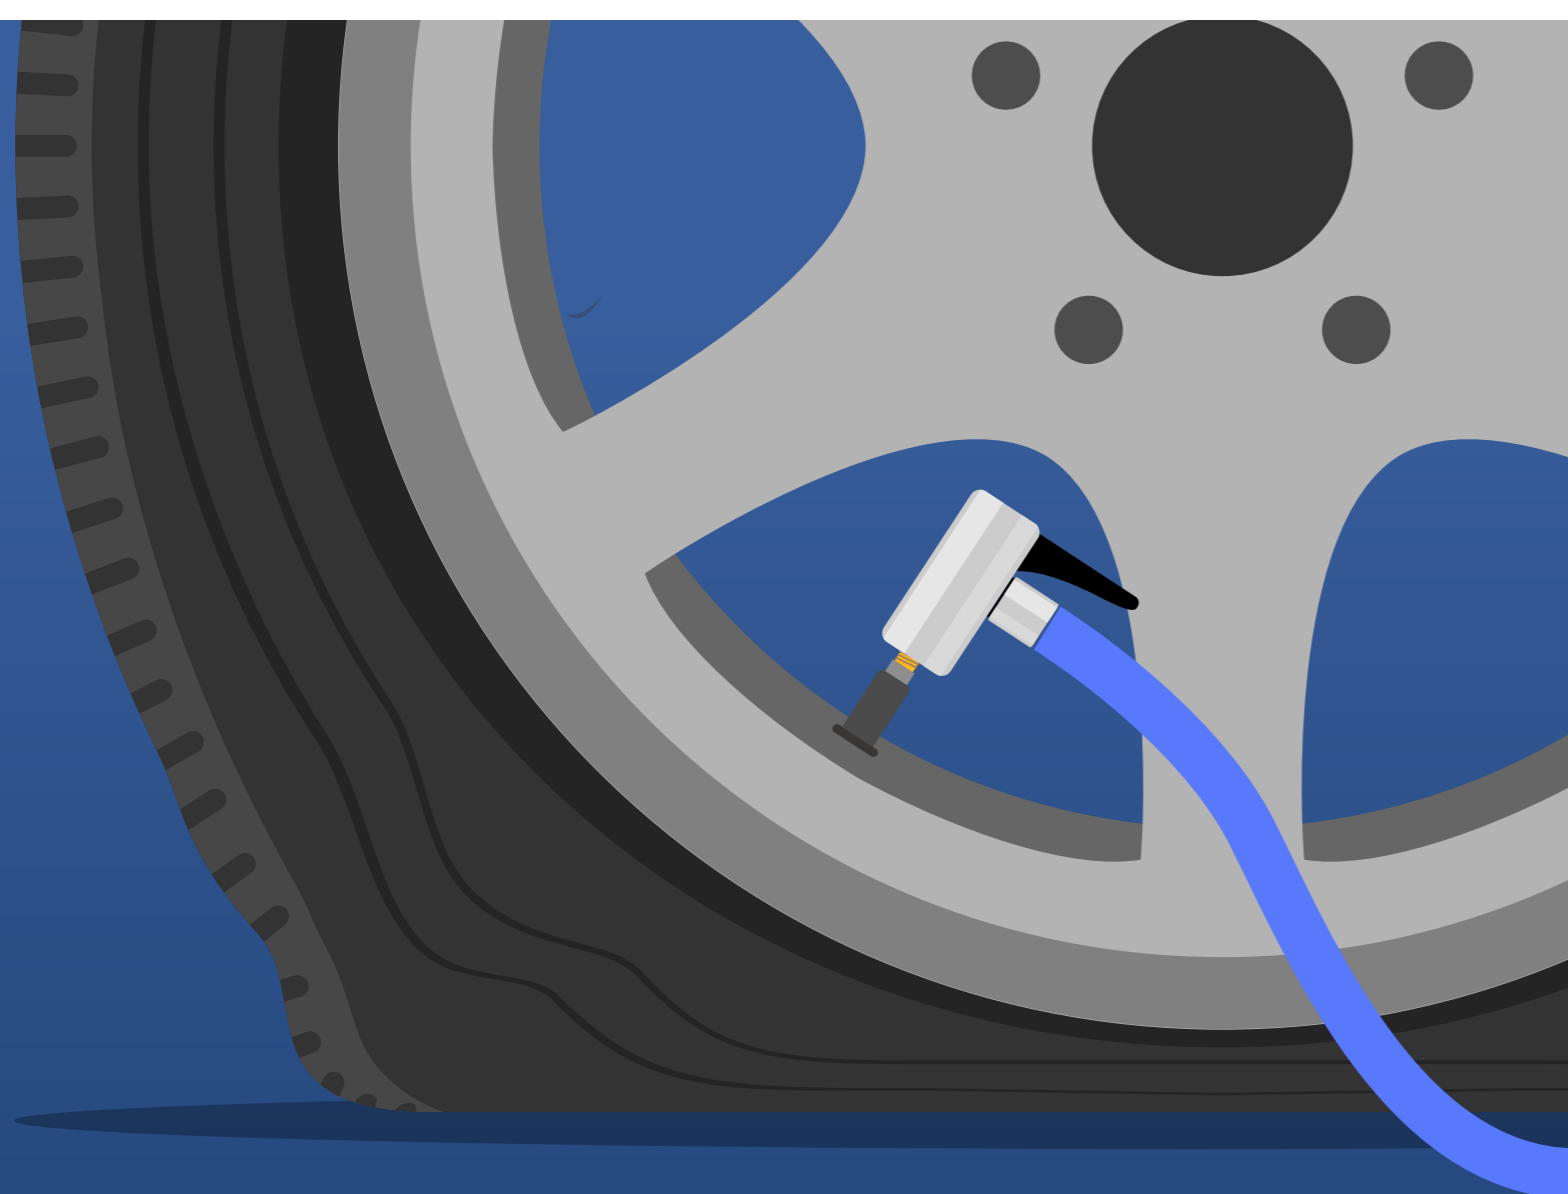

 4. **ATTACH THE PUMP, AT HOME OR THE PETROL STATION, AND ADD OR RELEASE AIR IN SHORT BURSTS UNTIL CORRECT PRESSURE IS REACHED.**

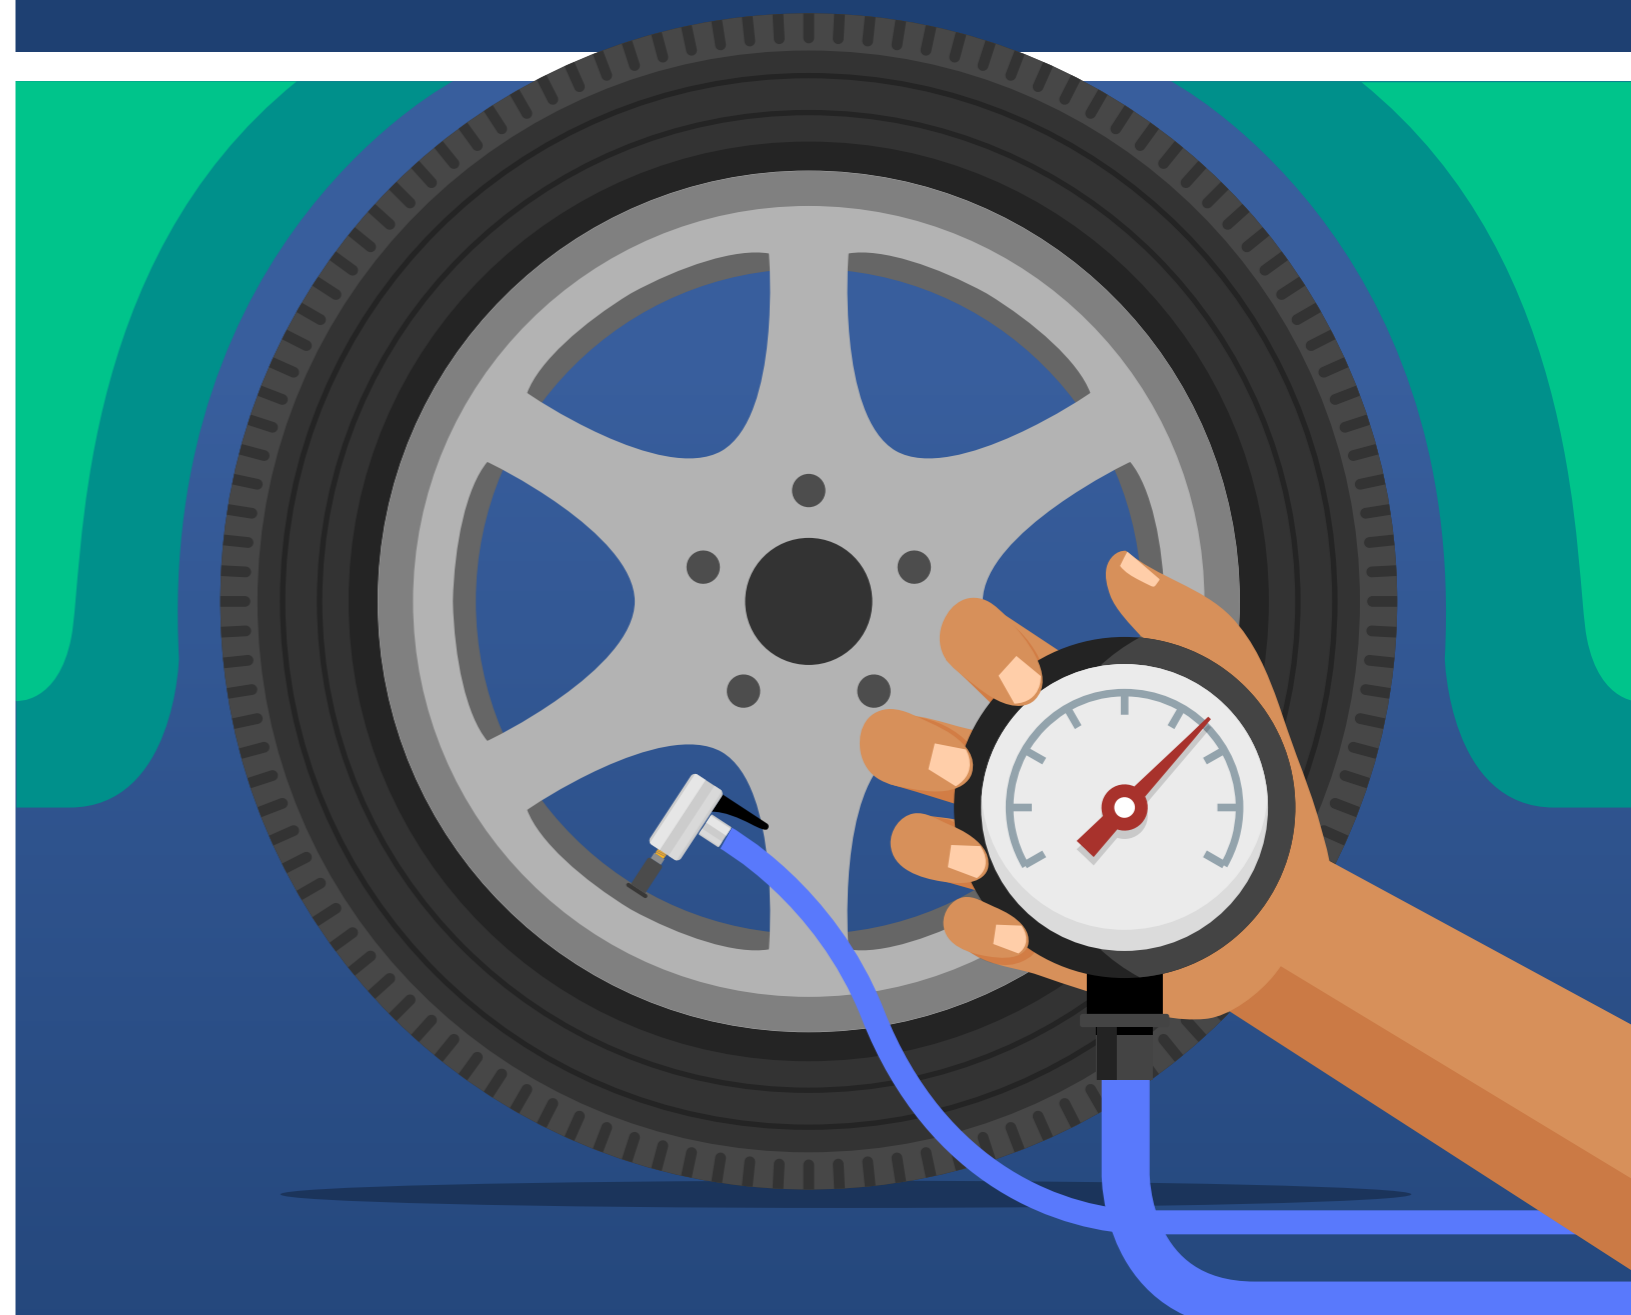

5. **DO FINAL CHECK WITH YOUR GAUGE TO ENSURE PRESSURE IS CORRECT.**



6. **REATTACH VALVE CAPS AND INSPECT YOUR TYRES BEFORE DRIVING AWAY HAPPY, EVERY TIME.**

DRIVE AWAY HAPPY EVERY TIME